


Quickstart

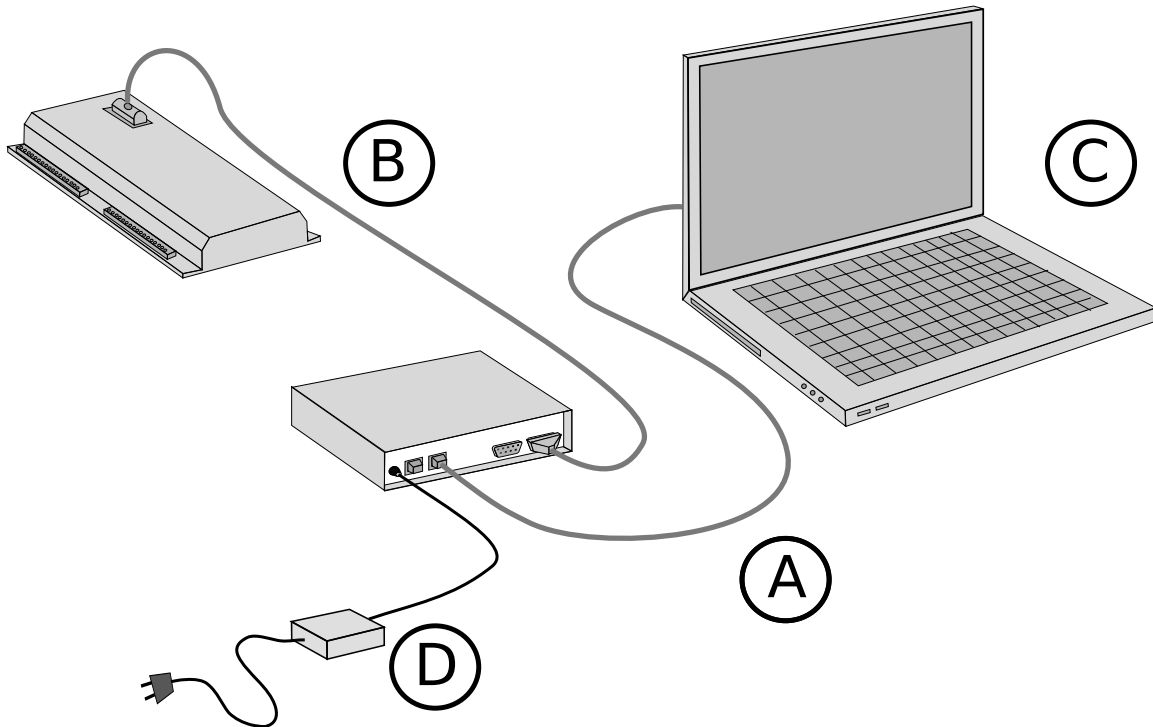

- A.** Connect a cross-over Ethernet cable between your computer and the Greyhound Server (eth1).
- B.** Connect the peripheral equipment. (*OPTIONAL*)
- C.** Configure your computer to use the following IP settings
IP address: 192.168.1.3
Subnet mask: 255.255.255.0
- D.** Attach power to the Greyhound Server.
- E.** Start a web browser and point it to <http://192.168.1.2>.
- F.** The login page will now be displayed. Login using the following:
User: admin
Password: _AdminPass